



Mercedes Sprinter 170 Window Van

AUTOPLY INC INSULATION KIT SCHEMATIC

VEHICLE YEARS
2016 – Present

KIT NUMBER: 3000W | KIT CONTENT: Ceiling, sides and doors / 21 pcs


Kits are organized and packaged by ceiling pieces, left side pieces and right side plus rear doors. Each group of patterns are separated by a sheet of paper for identification during unpackaging. It is recommended to lay each section out in accordance with the assembly views below prior to first time installations.



Assembly view A



Forward

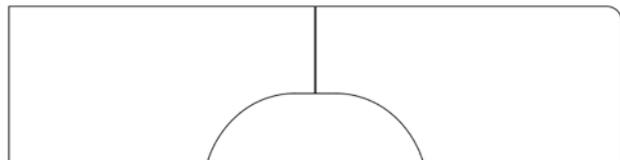

Driver Side / Left Side



Rear Door Tops



Mercedes Sprinter 170 Window Van

AUTOPLY INC INSULATION KIT SCHEMATIC

VEHICLE YEARS
2016 – Present

KIT NUMBER: 3000W | KIT CONTENT: Ceiling, sides and doors


Assembly view B



Forward



Passenger Side / Right Side

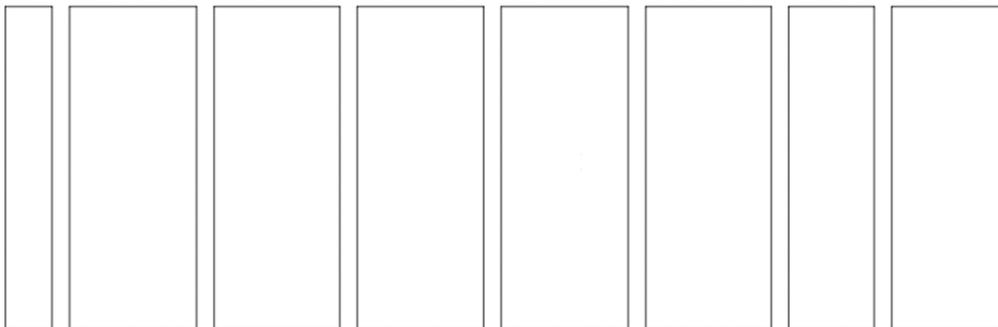

Forward

Ceiling