




# AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

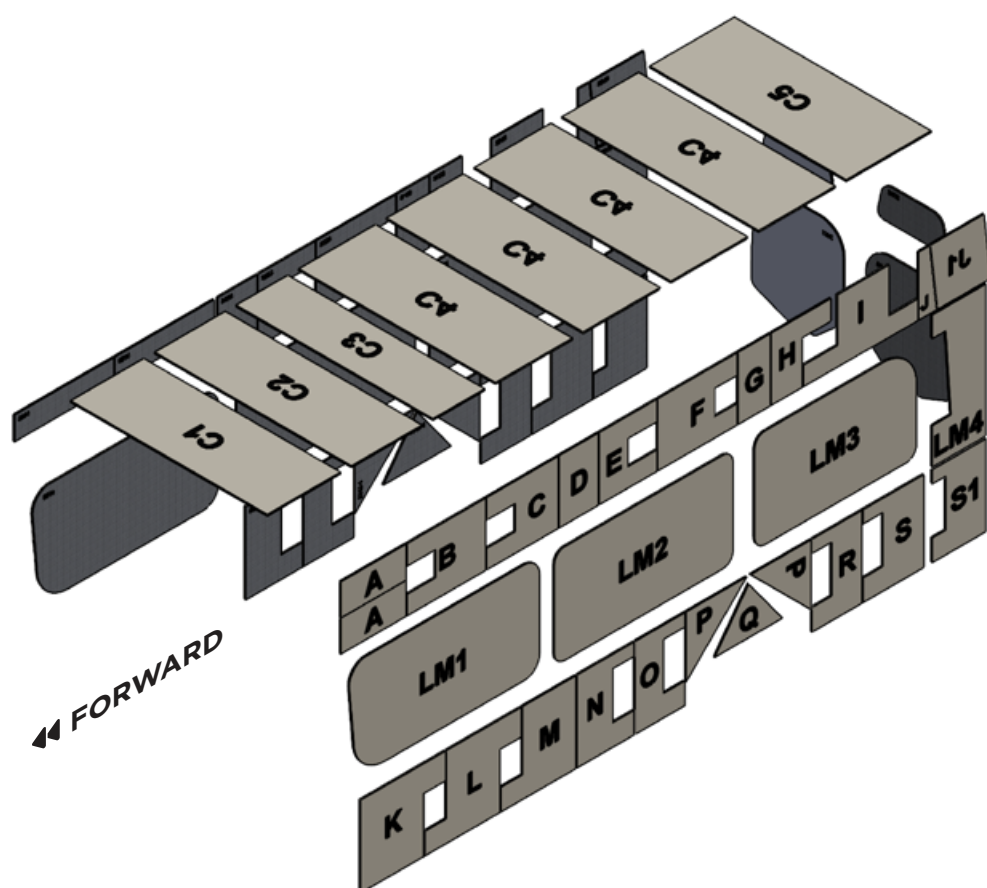

## LEFT (DRIVER) SIDE

**NOTE: Flip sheet over to view opposite side.**

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

**C** = ceiling

**L** = left side

**R** = right side

**M** = mid-section

**B** = bottom

**RD** = rear door

# MERCEDES-BENZ SPRINTER

170 High Roof Extended

Model years: 2016 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

3000VX, 3000VX-1

### CONTENTS

Ceiling, sides and doors.  
61 pieces.

#### **i** Note

Cutouts from the upper and lower wall pieces are included. They fit inside the hollow wall structures and between each piece it was cut from.

#### **i** Tip

Installing upper and lower wall pieces: Use a spray bottle with 71-90% isopropyl alcohol to wet the adhesive and easily slide pieces around and behind wall structures. The adhesive will adhere to the surface once the alcohol evaporates.

Please visit our website for more tips and videos.

 [www.autoply.net](http://www.autoply.net)

 +1 (954) 799-3035

 [info@autoply.net](mailto:info@autoply.net)



**AUTOPLY**  
AUTOMOTIVE INSULATION KITS



# MERCEDES-BENZ SPRINTER

170 High Roof Extended  
Model years: 2016 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

3000VX, 3000VX-1

### CONTENTS

Ceiling, sides and doors.  
61 pieces.

#### **i** Note

Cutouts from the upper and lower wall pieces are included. They fit inside the hollow wall structures and between each piece it was cut from.

#### **i** Tip

Installing upper and lower wall pieces: Use a spray bottle with 71-90% isopropyl alcohol to wet the adhesive and easily slide pieces around and behind wall structures. The adhesive will adhere to the surface once the alcohol evaporates.

Please visit our website for more tips and videos.



**www.autoply.net**




**+1 (954) 799-3035**



**info@autoply.net**

Guide 3000VX - Rev. 20250527

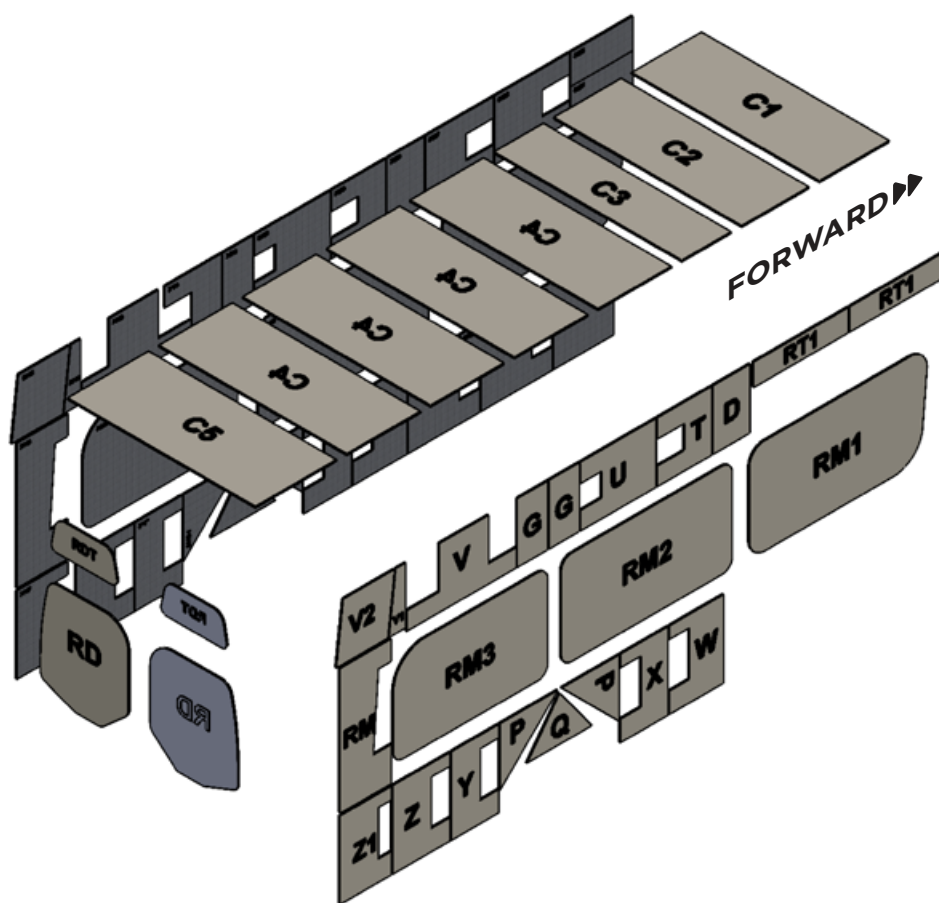

## RIGHT (PASSENGER) SIDE

**NOTE:** Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

**C** = ceiling

**L** = left side

**R** = right side

**M** = mid-section

**B** = bottom

**RD** = rear door