




# AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

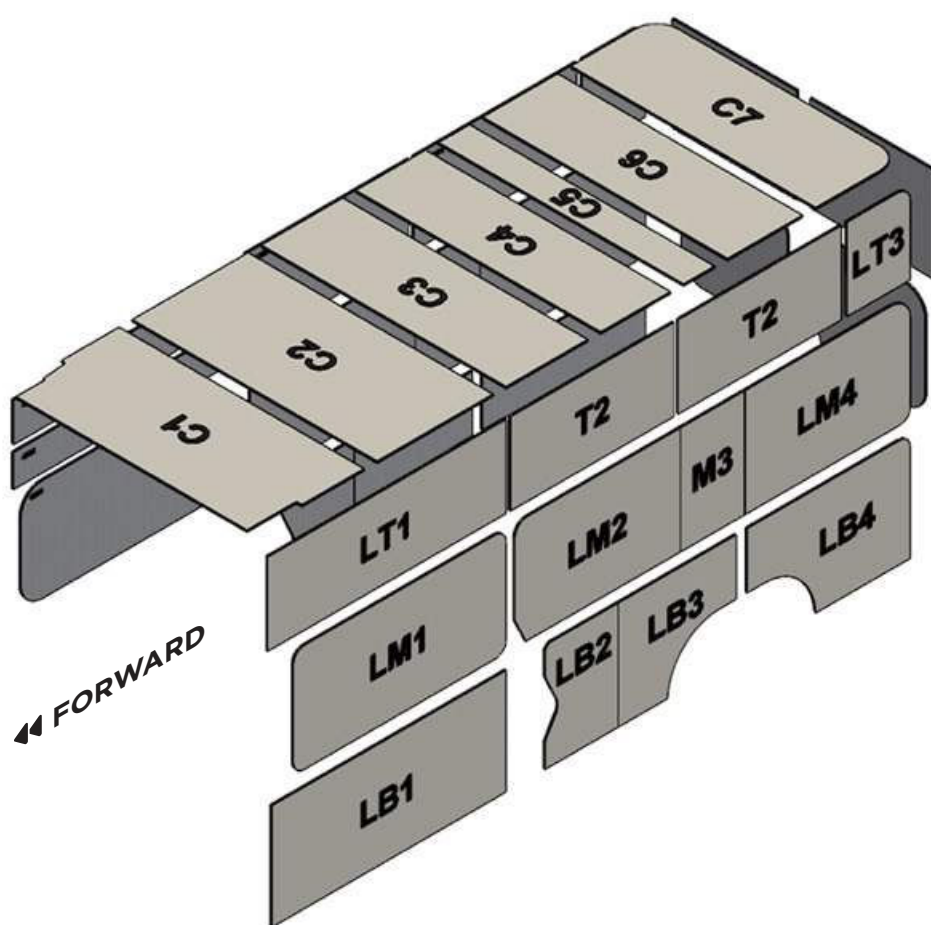

## LEFT (DRIVER) SIDE

**NOTE: Flip sheet over to view opposite side.**

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

**C** = ceiling

**L** = left side

**R** = right side

**M** = mid-section

**B** = bottom

**RD** = rear door

# RAM PROMASTER

159 Super High Roof

Model years: 2023 - present

## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

4000XSH, 4000XSH-1

### CONTENTS

Ceiling, sides and doors.  
35 pieces.

### Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



[www.autoply.net](http://www.autoply.net)



+1 (954) 799-3035



[info@autoply.net](mailto:info@autoply.net)



**AUTOPLY**  
AUTOMOTIVE INSULATION KITS



# RAM PROMASTER

159 Super High Roof

Model years: 2023 - present


## PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

### KIT PART NUMBERS

4000XSH, 4000XSH-1

### CONTENTS

Ceiling, sides and doors.  
35 pieces.

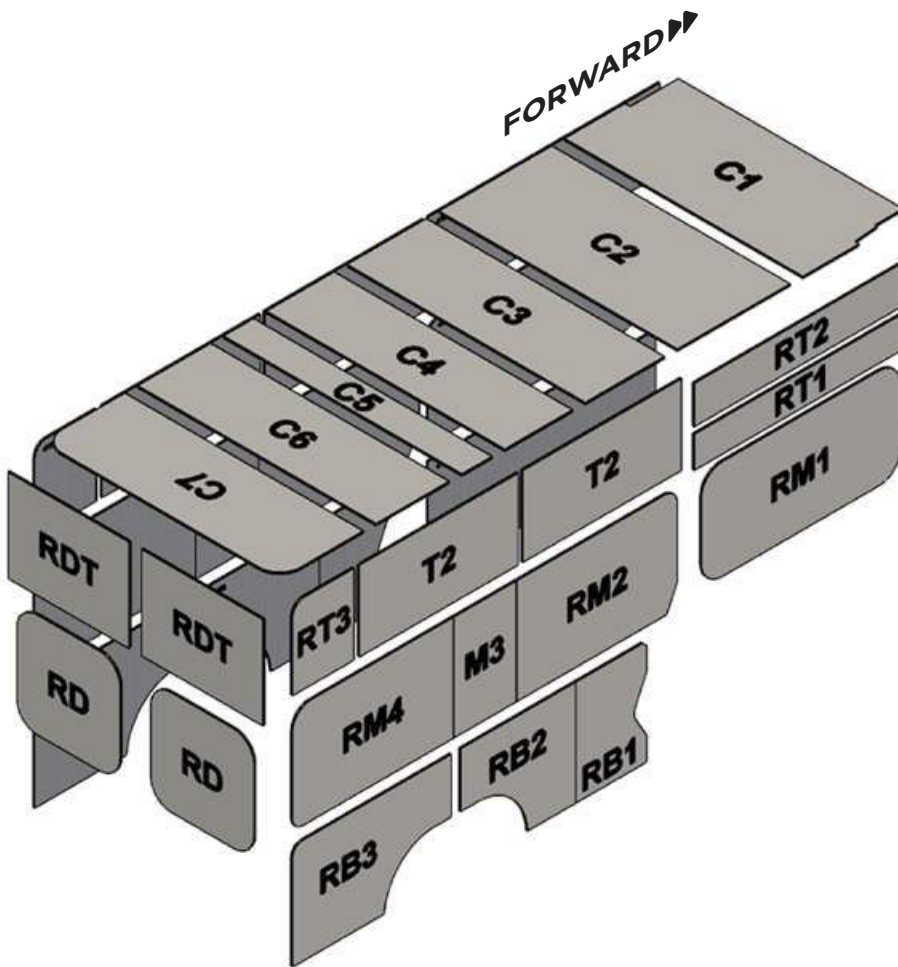

## RIGHT (PASSENGER) SIDE

**NOTE:** Flip sheet over to view opposite side.

Each part is labeled with a printed alphanumeric code that indicates its specific location and position on the vehicle.

**C** = ceiling

**L** = left side

**R** = right side

**M** = mid-section

**B** = bottom

**RD** = rear door

 [www.autoply.net](http://www.autoply.net)

 +1 (954) 799-3035

 [info@autoply.net](mailto:info@autoply.net)