




AUTOPLY

AUTOMOTIVE INSULATION KITS



- Part numbers are printed on adhesive release paper.
- The release paper backing is pre-seamed for easy peel-and-stick application.
- Ensure surfaces are clean, dry, and free from dirt, dust, or loose residue to allow proper adhesion.
- This product can withstand installed temperatures of -40°F to 250°F.

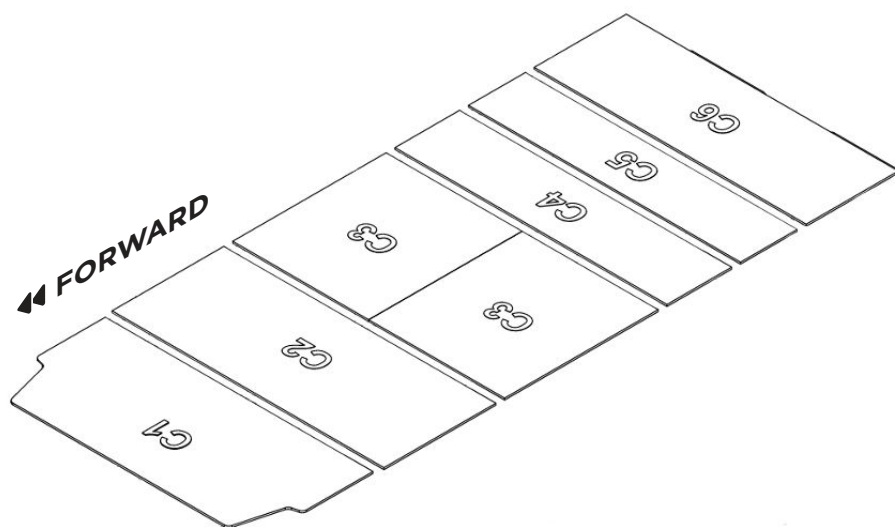

VIEW FROM ABOVE VEHICLE

Each part is labeled with a printed alphanumeric code that indicates ceiling position per the schematic above.

FORD TRANSIT

148 High Roof Extra Long
Ceiling Only

Model years: 2016 - present

PRE-CUT INSULATION KIT WITH SELF-ADHESIVE

KIT PART NUMBER

5300X-1

INSULATION RATING

R4: 1-inch thick insulating material

CONTENTS

Ceiling, 7 pieces.

i Installation Tip

For larger pieces, start by peeling back a small section of adhesive on one end. Position the piece in place, then gradually remove the rest of the release paper while pressing it down from side to side.



www.autoply.net



+1 (954) 799-3035



info@autoply.net